


DETAIL OF CABLE FITTING AND PROTECTION AT SADDLE

SECTION A-A

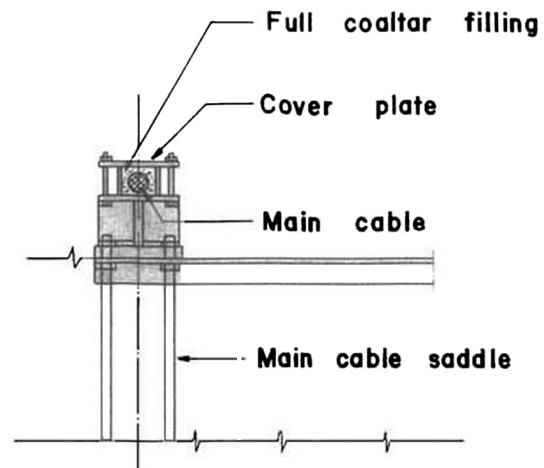

NOTES :

- 1) Wind the main cables 3 times around the drum before clamping.
- 2) Erect the deck before casting the third layer of reinforced concrete 1:2:4 (excluding wiremesh and fixation cable).
- 3) Do not allow persons to cross the bridge before casting and curing of the third layer of reinforced concrete 1:2:4.
- 4) Required additional cable length for anchorage on one bank (from front of foundation) : 14.50 m.
- 5) Make rough construction and working joints.
- 6) Note the following changes of reinforcement steel (Working and Assembly Drawing) - part no. 60-20, only 11 units required.

